

CHANGE FILTER AS INSTRUCTED BY THE SERVICE MANUAL SCHEDULE.

INSTALLATION INSTRUCTIONS:

REMOVE OLD GASKET, FROM ADAPTER. REPLACE WITH THE NEW GASKET AND APPLY A FILM OF ENGINE OIL TO THE SEALING GASKET. INSTALL FILTER AND TURN THREE FOURTHS OF ONE FULL TURN AFTER THE GASKET CONTACTS BASE. RECONNECT OIL DRAIN HOSES. START ENGINE AND CHECK FOR ANY LEAKS.

V2212

4156

CENTRIFUGAL FILTER

ARROWS SHOW DIRECTION TO TIGHTEN AND ARE 1/4 TURN APART.



WRENCH HERE TO REMOVE

HAND TIGHT ONLY

IIF 1153 Centrifugal Filter